















Connect dishwasher to LAN/WiFi

- ▶ Open the Customer menu 
- ▶ Login to the Customer menu
- ▶ Use the NAVIGATION key to open the LAN / WiFi  configuration 
- ▶ Confirm with the MENU SELECTION key 

Determine country of installation:

- ▶ Use the NAVIGATION key to open the "Location" menu option 
- ▶ Confirm with the MENU SELECTION key 
- ▶ Use the NAVIGATION key to select the country of installation 
- ▶ Confirm with the MENU SELECTION key 

Setting up WiFi

- ▶ Use the NAVIGATION key to open the "WiFi" menu option 
- ▶ Confirm with the MENU SELECTION key 

- ▶ Use the MENU SELECTION key to start the connection wizard
- ▶ Use the MENU SELECTION key to start the network search 
- ▶ Use the NAVIGATION key to select the desired network 
- ▶ Confirm with the MENU SELECTION key 
- ▶ Enter password if required.

Use the following keys for:
Upper and lower case, special characters, ...
Use the keys to navigate and confirm your selection!

→ Network connection is being established 



▶ Confirm successful connection



▶ Read and confirm the Privacy Policy



Scroll with the navigation buttons



→ Access code is being generated. Network connection is being established.

Code is valid for 48 hours and is required for the integration of the machine into the WASHSMART app

▶ Confirm with the MENU SELECTION key to complete the setup

